

**Prospecting Metal Detector** 

# **Quick Start Guide**

Visit garrett.com to download full-length GM24k User's Manual.

# **ASSEMBLY**




- 1. Attach the lower rod to the searchcoil. Put rubber washers inside the recess area on the lower stem, then insert bolt and nut.
- 2. Assemble the three rod sections to best fit your body
- 3. Carefully wrap and secure the cable around the shaft of the detector
- 4. Connect the coil cable to the back of the control box
- 5. Insert the battery pack
- 6. Insert headphones into back of detector

Garrett Electronics 1881 W. State St. Garland, TX 75042 USA



# GM24k Interface

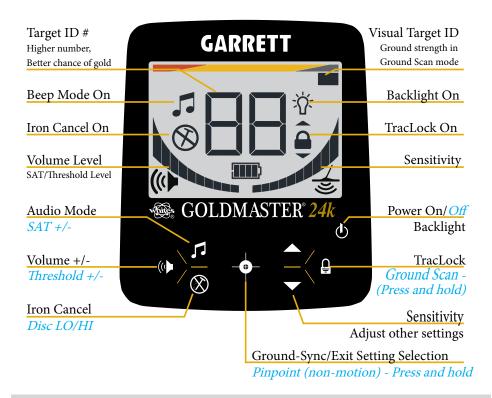

NOTE: Regular text = button TAP

Italic text = button HOLD or Press for one second and release unless indicated to "Press and hold"

## **FEATURES**

- 1. **SENSITIVITY** Set the sensitivity at a level that does not result in false signals from the ground. Very strong ground may result in the ≡≡ symbol on screen and a loud sound this means the sensitivity is too high.
- 2. **GROUND BALANCE** With the default setting, the detector will use XGB to automatically ground balance. Tap ☐ to lock the ground balance to the current setting. Tapping → when the ground balance is locked will update the current ground setting to what is under the coil.
- 3. **GROUND SCAN** Hold ☐ to put the detector into Ground Scan mode. The top bar displays the ground strength and the two digit numbers display the ground type (phase). Useful for tracing paystreaks.

#### FEATURES continued

- 4. IRON CANCEL Tap ⊗ to silence hot rocks, trash and mineral changes in both audio modes. Hold ⊗ to adjust the Iron Cancel setting (tap the button to cancel high-wrap hot rocks). Note that this setting may decrease the detector's sensitivity to very small gold, but is necessary in difficult ground conditions.
- 5. **VOLUME and THRESHOLD** Tap ( to adjust the volume with the up and down buttons. Press and hold ( for one second to adjust the threshold with the up and down buttons ("th" displays on the screen). With the volume at levels over 8 you can enable Boost 1 and Boost 2 for maximum sensitivity.
- 6. **AUDIO MODE** With the displayed on screen, the detector is in "BEEP" audio mode (high tone = good target, low tone = bad target). The default setting (without on screen) is a traditional All-Metal audio mode with greater sensitivity to small targets.
- 7. **SAT** SAT can smooth out ground inconsistencies. Press and hold **f** for one second to adjust it ("Sa" displays on screen, 2 is the default setting).
- 8. **PINPOINT** Hold for non-motion pinpoint mode. In difficult ground this mode may be affected by mineralization.
- 9. **BACKLIGHT** Tap **(b)** to enable the backlight (this reduces battery life).
- 10. **FREQUENCY SHIFT** Hold ⊗ when turning the detector on to shift frequency (useful when there is EMI). Use ▲ and ▼ to change frequencies. Power off to save the selection.
- 11. **FACTORY RESET** Hold ▼ when turning on the detector. Press and hold button when "Fd" is on screen to reset the machine to factory default.

## FCC COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions.

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.


CAUTION: Changes or modifications not expressly approved by Garrett Electronics, Inc. could void your authority to operate this product.

### CE COMPLIANCE

This device operates within the following frequency range and maximum power output:

- (a) Frequency band in which the radio equipment operates 46.696kHz 47.904kHz
- (b) Maximum radio-frequency power transmitted in the frequency band in which the radio equipment operates: 21.57 dBuA/m The above frequency range and power output is consistent with test report results.

# **Quick Start**

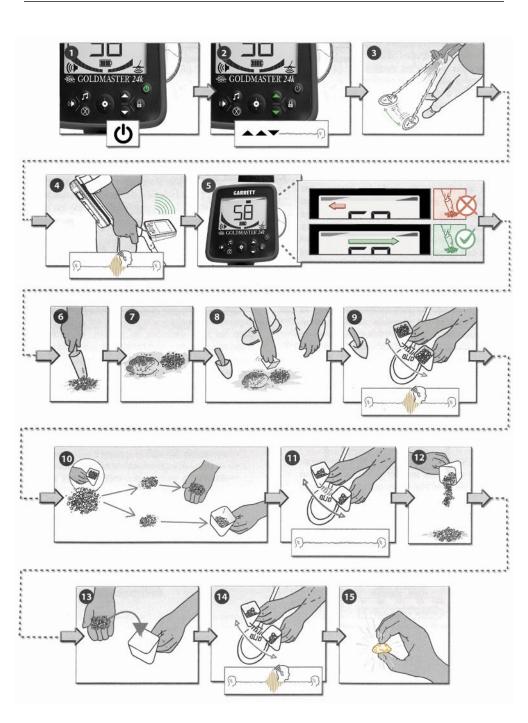

© 2021 Garrett Electronics, Inc. PN 1557200.B.0821